

Upholstered Sitting Bench Plans

Check out the [corresponding blog post](#) for more details on how to complete the build.
Always practice safety when using power tools and be sure to wear all the proper safety equipment.



Tools, Materials, Cut List

Tools
Milescraft PocketHoleJig
Milescraft Pocket Hole Screws
Miter Saw


(tools continued)
Table Saw
Planer
Orbital Sander
Wood Glue
Face Clamp
Power Drill
Jigsaw
Speed Square

Count	Materials
3	2x2, 6 feet long
2	2x8, 5 feet long
1	1x6, 4 feet long

Part	Count	Cut List
A	4	2x2, 17" long
B	2	2x2, 9" long
C	1	2x2, 29.5" long
D	4	2x2, 15" long (intentionally left long - will be trimmed later to size). One side cut at a 60 degree angle
E	1	1x6, 50" long
F	2	2x8, 60" long


Step 1:

Dimension all of your boards according to the cut list above. Start with the 4 leg pieces (A); they will be 17" long.

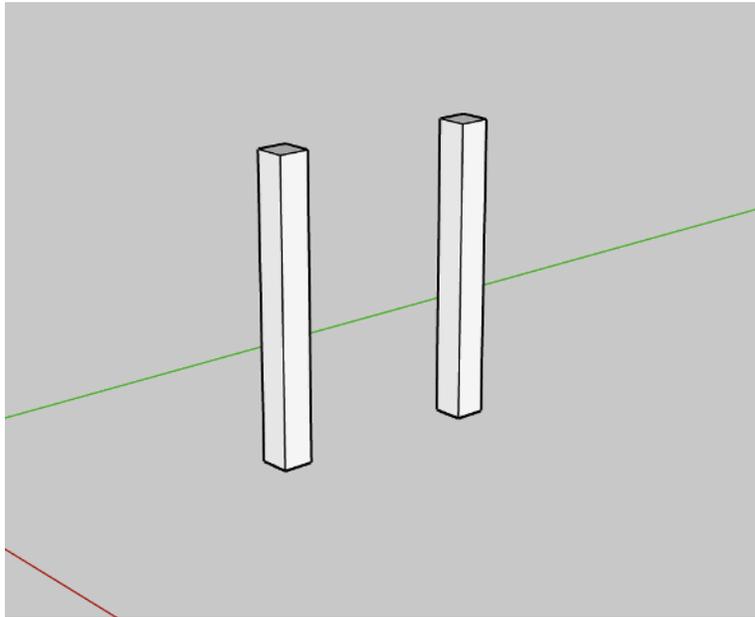


Step 2:

Attach the stretcher (Part B) to the legs using wood glue and pocket holes.

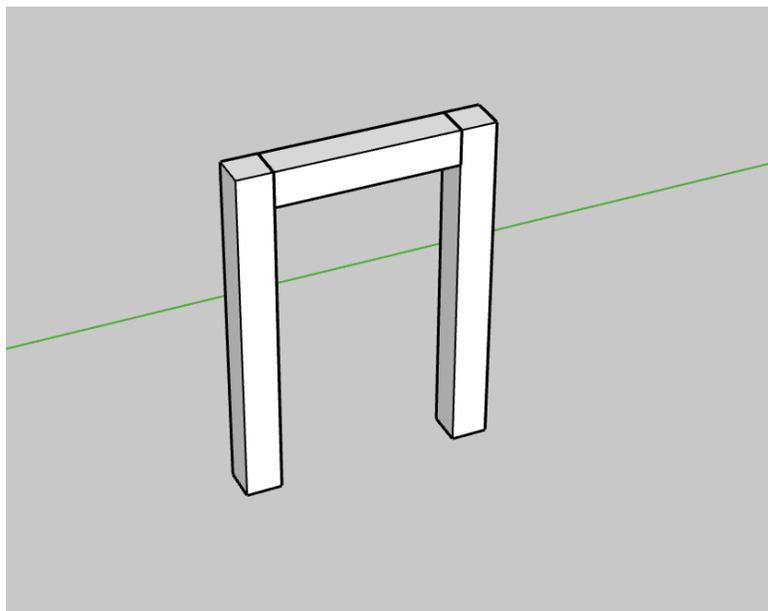



Repeat for the other set of legs.

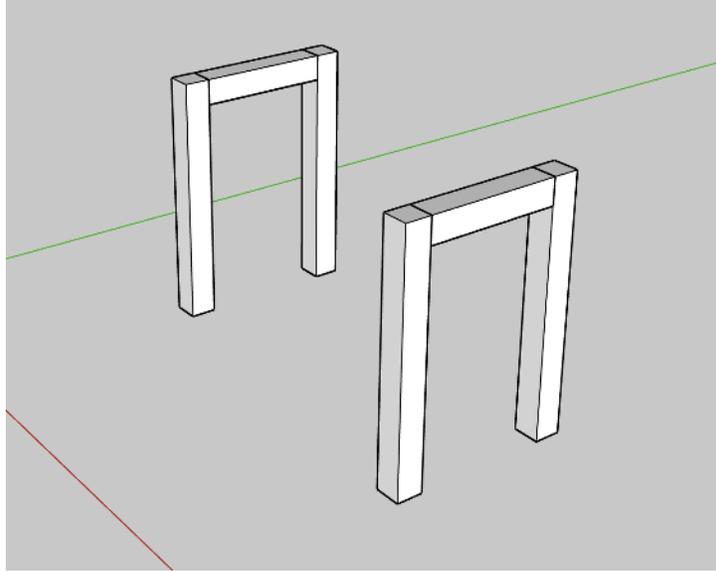


Step 3:

Attach the angled pieces (Part D) to the floating stretcher (Part C) using wood glue and pocket holes.

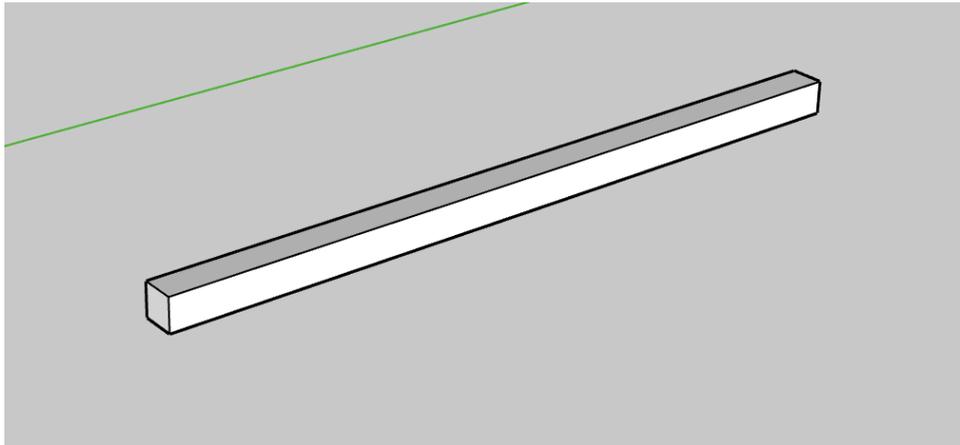

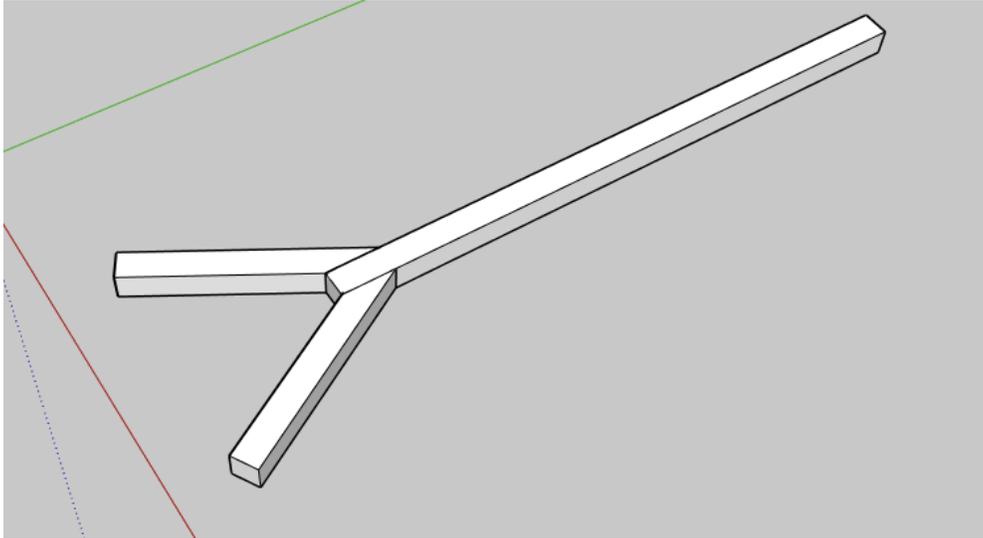


Repeat on the other side. The angled pieces are intentionally left long so that they can be trimmed to size.

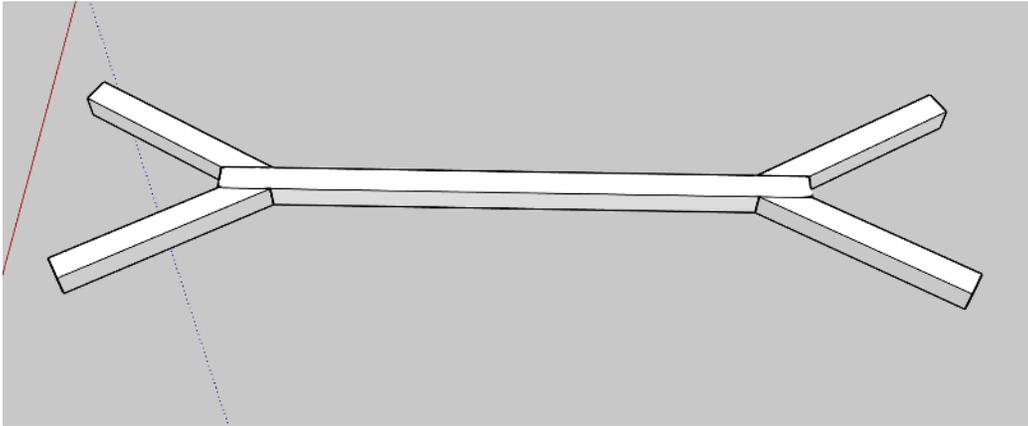


Step 4:

Lay the assembled legs over the angled pieces. Make sure that the outside edges are aligned. Mark where to trim the angled pieces (Parts D).

THE ACCENT PIECE
diy · home · handmade

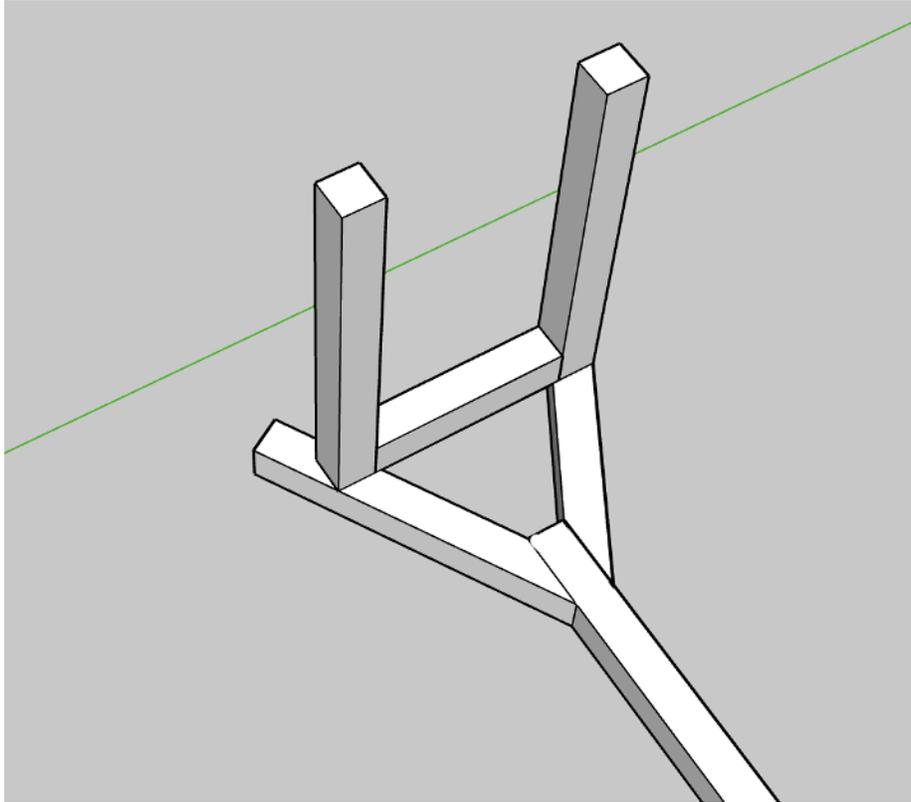


Trim the excess with a jigsaw. Once it is trimmed, the angles should be aligned correctly with the legs.

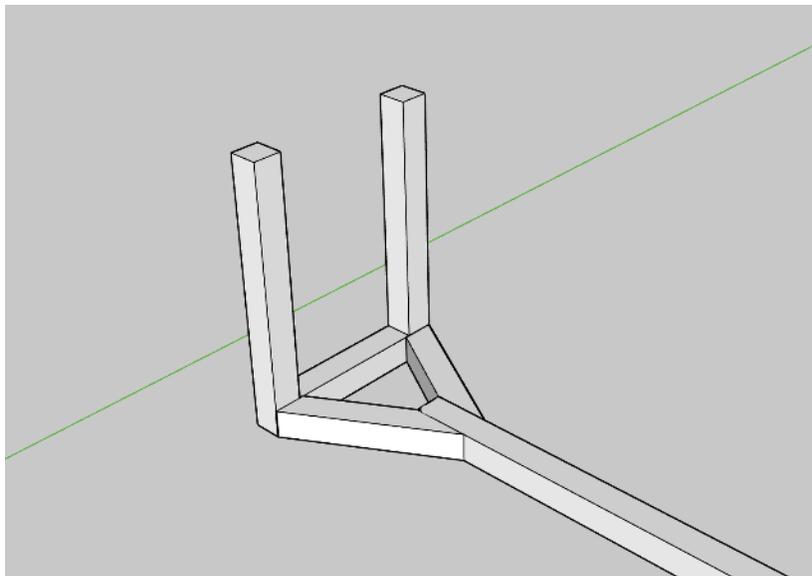


THE ACCENT PIECE
diy · home · handmade

Flip the legs over. Attach the floating stretcher 4" from the bottom.

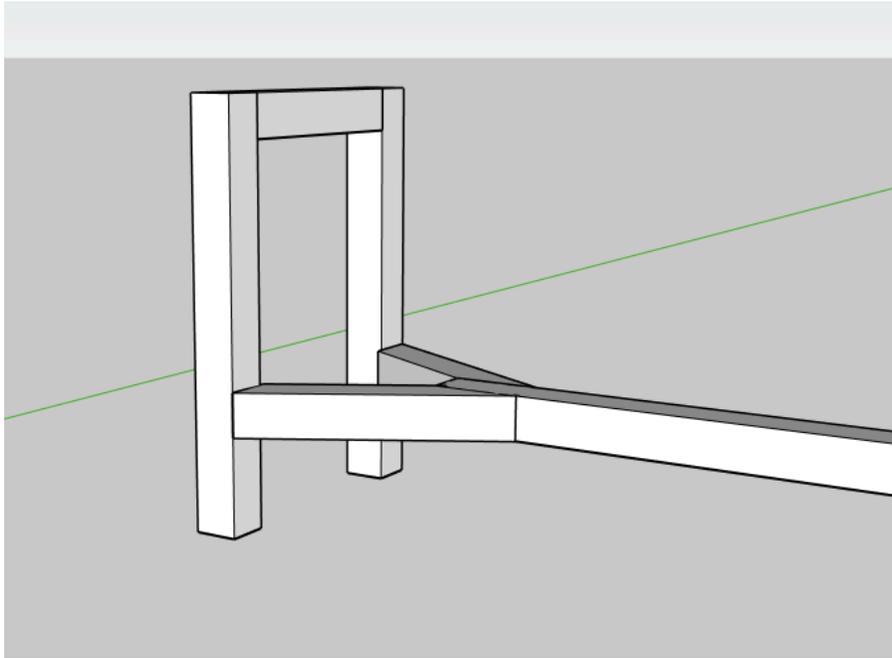


Repeat on the other side.

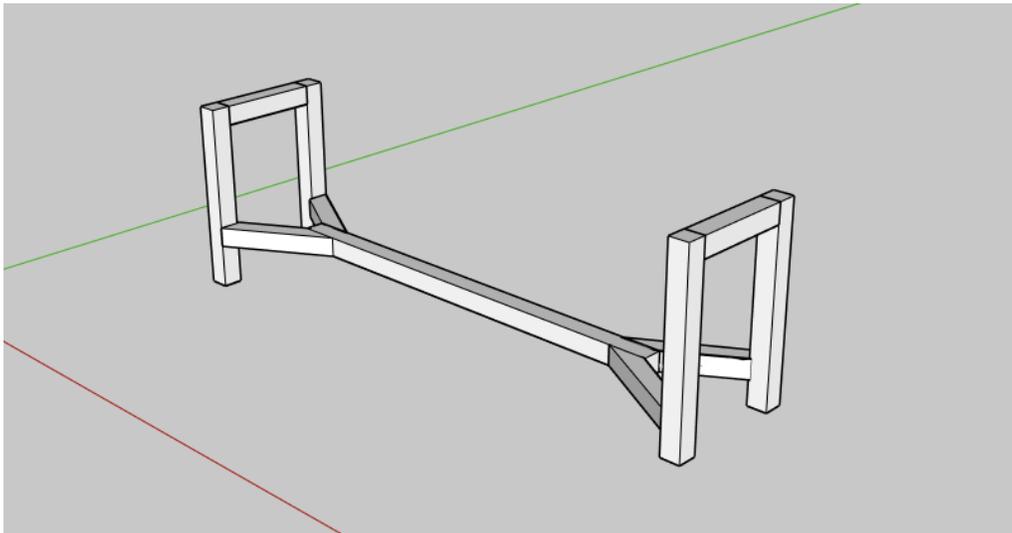


Step 5:

Attach the top stretcher (Part E) to the legs using wood glue and pocket holes.

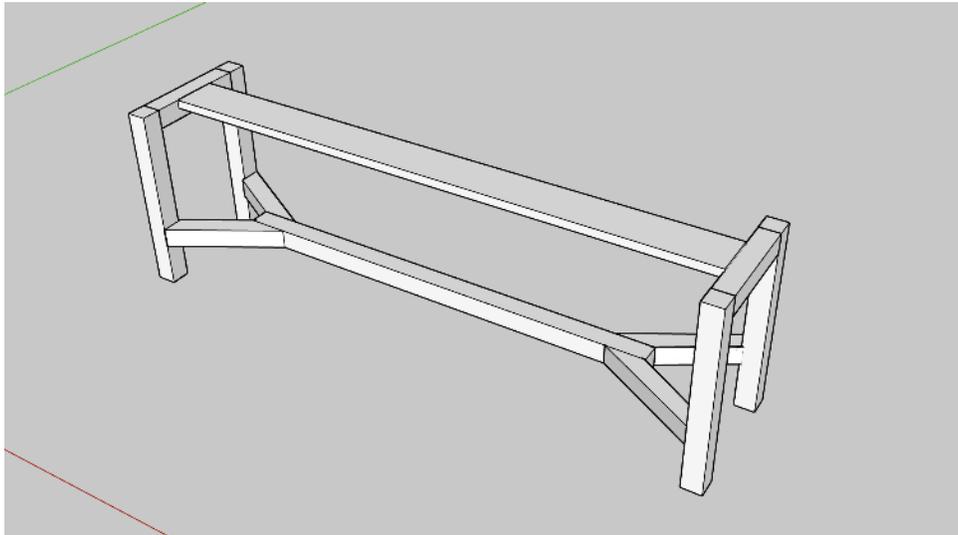


Step 6:

Attach both benchtop pieces (Parts F) together with pocket holes. If needed, joint the edges for a clean seam.

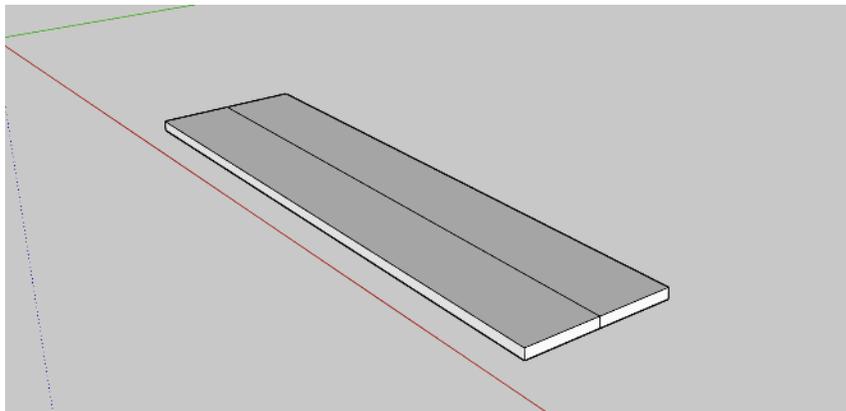

Step 7:

Attach the benchtop (Part F) to the stretcher (Part E) from the underside in order to hide the screws.

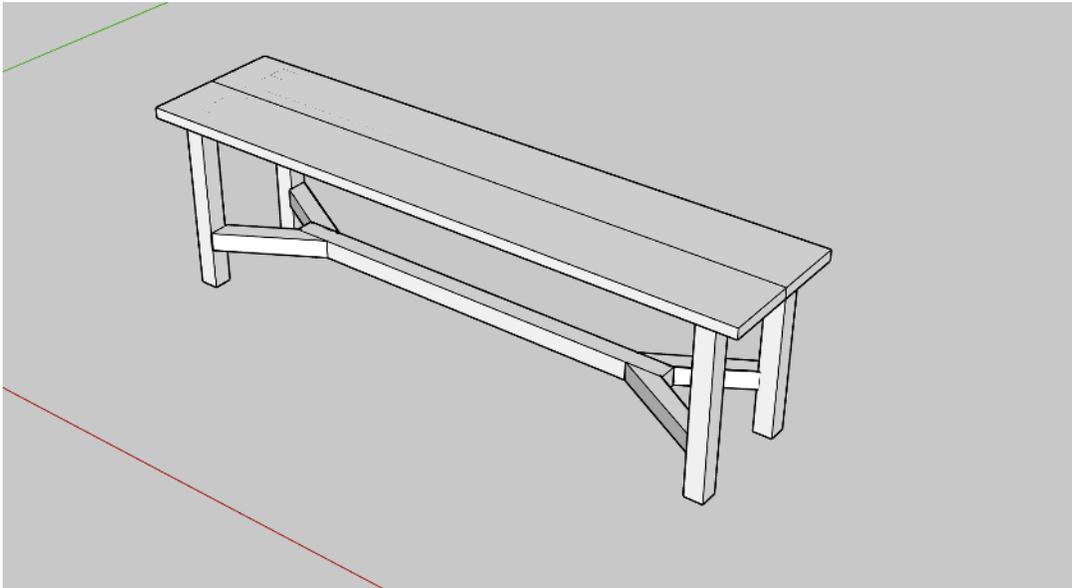

Your bench is now complete! You can now move on to the upholstery portion of the project. Details for that can be found in [this post](#).

Find me on the socials:

TheAccentPiece.com

Instagram: @TheAccentPiece

facebook.com/TheAccentPiece